


H-bench







Straight Line

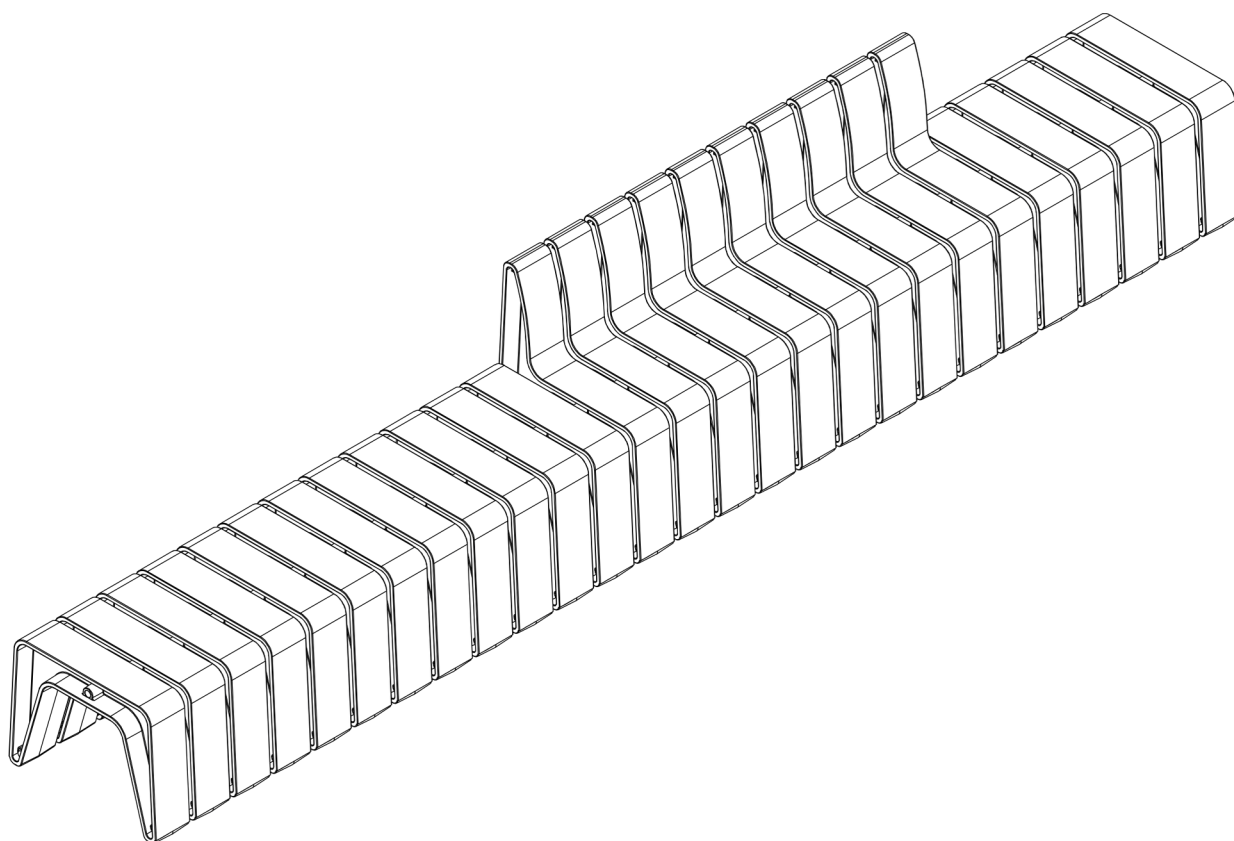









Required:
Hex Key 5




Start of straight line

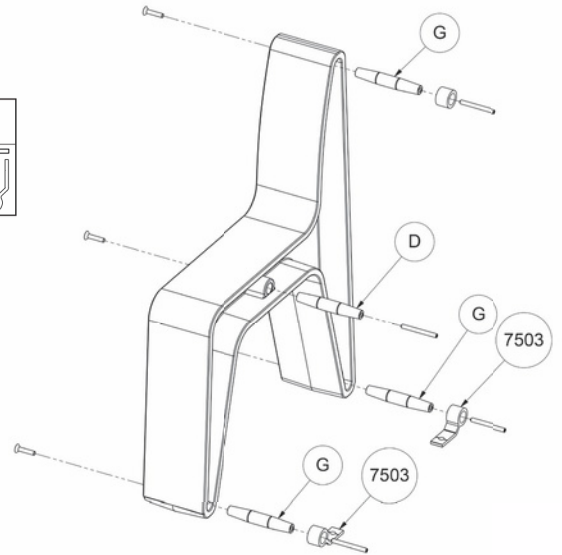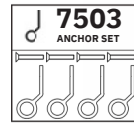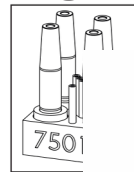
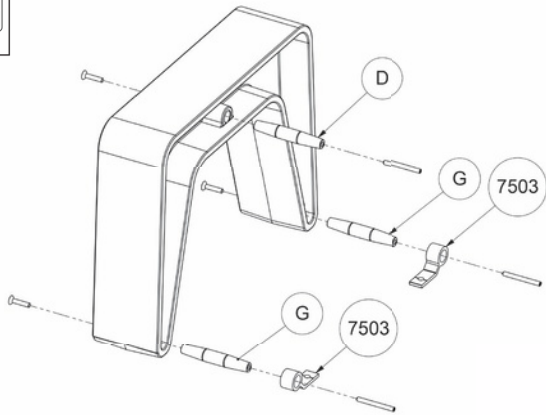
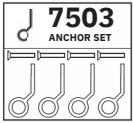
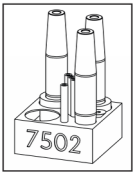


Next module of straight line

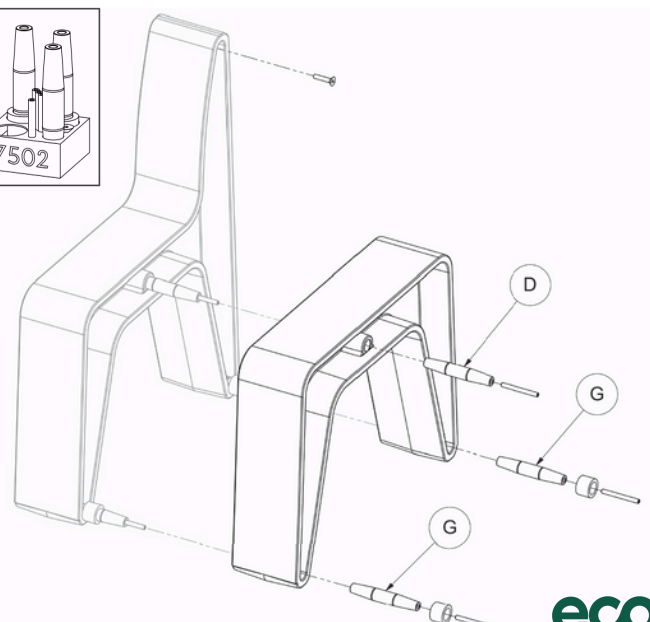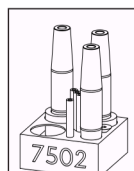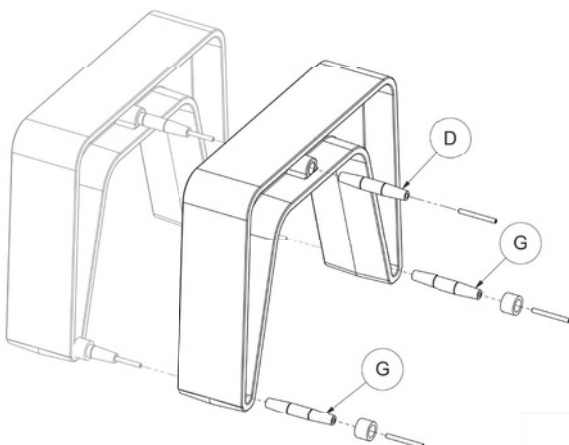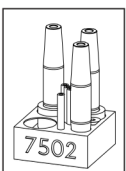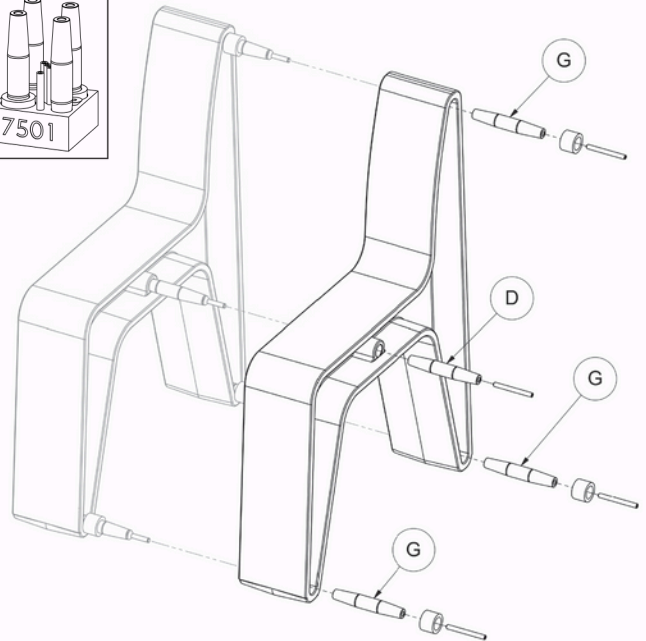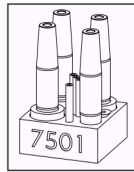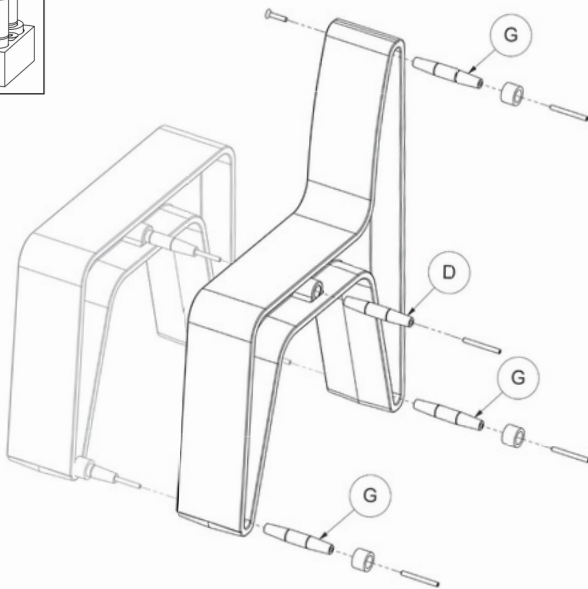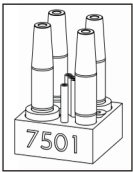


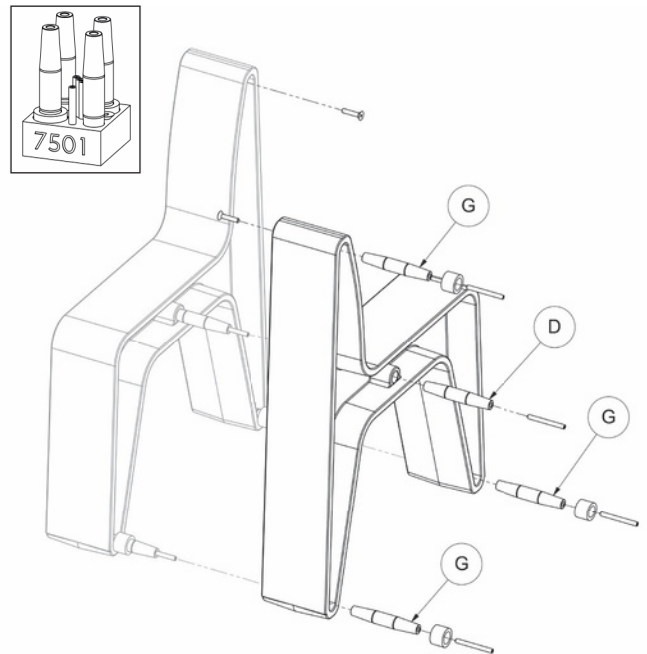


End of straight line

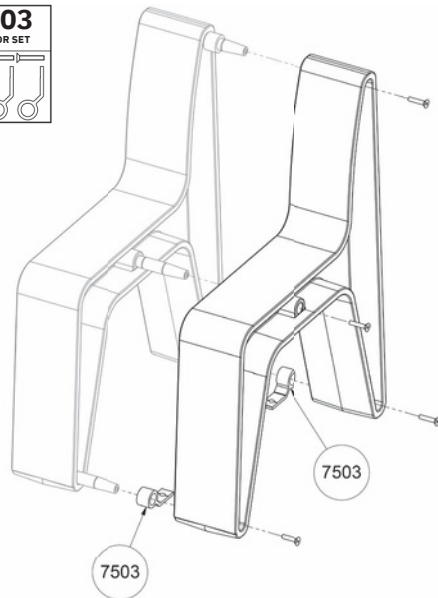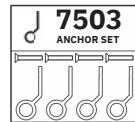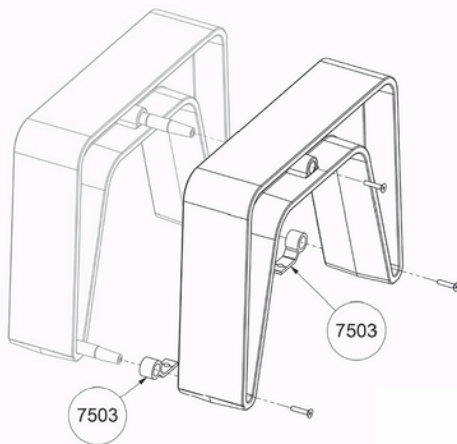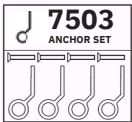

Fixation

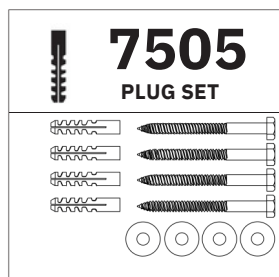



OR

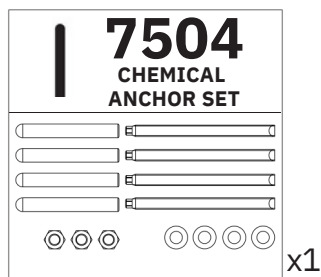

Wrench sizes:
M4, M10




Drill sizes:
12mm

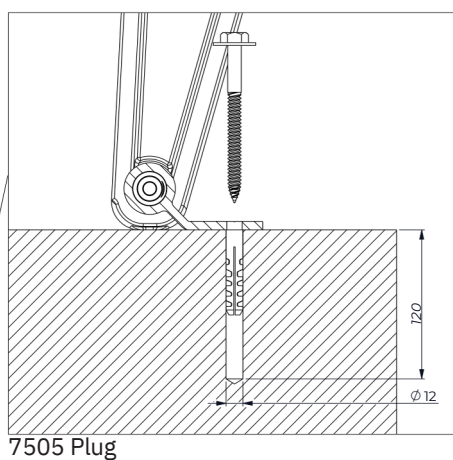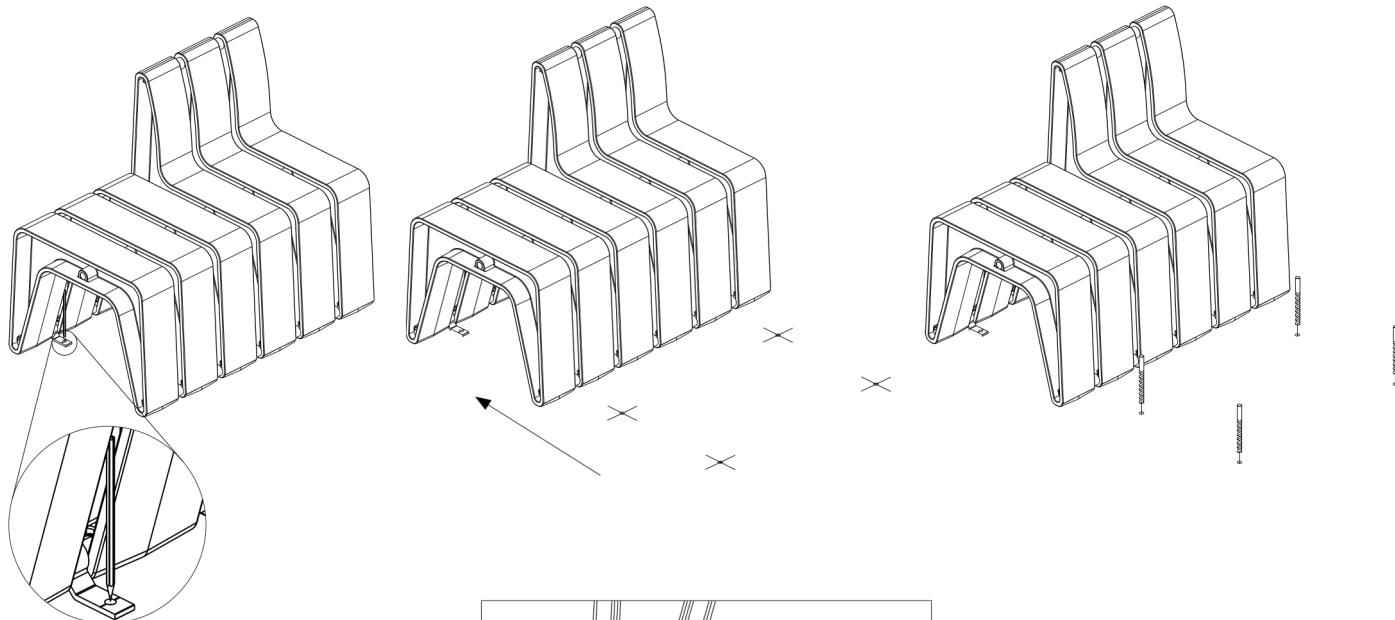

7505 Plug

OR

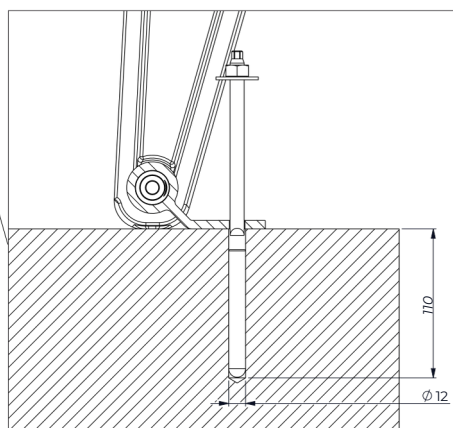

7504 Chemical Anchor

